

# HIGH ENERGY IGNITION MODULE

## 200-HEP-A6Z 7J



200-HEP - A6Z 7J



# HIGH ENERGY IGNITION MODULE

## 200-HEP-A6Z 7J

### KEY FEATURES

- High energy ignition system
- Power discharge: 7J
- Output volt.: 2kV impulsive capacity discharge
- Degree of protection: IP20
- Discharge frequency: < 0,6s to >8s adjustable, preset to 5s
- Installation type: for DIN connector
- Booster function: 4x7J/s (as option)

### MECHANICAL FEATURES

- Electronic circuits
- Operating temp. range: - 40°C to + 85°C
- Storage temp. range: - 55°C to + 55°C
- Dimensions: 89x74x118mm
- Unit weight: 500g
- Enclosure: PVC
- Connections: screw terminals

### ELECTRICAL FEATURES

- Nominal operating voltage: 2000V
- Consumption: < 1,6A
- Power supply 12/24VDC (from 10,5 to 28 VDC)
- Electronics c/w temperature compensation
- Discharge frequency regulation
- Fault relay (as option) - Max. applicable voltage 60VDC/42VAC 0,2A
- 12-24VDC remote start (as option)

### OPTIONS

- High Energy Ignition Probe 200-HEF-5AA
- Spark tip: 200-HEF-9A3
- Ex d IIC fix or portable version
- Power supply from 100 to 240VAC with dedicate power converter

### INSTALLATION

- Inside control local panel

### APPLY TO

- Flares
- Boilers

### CERTIFICATION

- CE marking
- UL for MDR power supply
- EAC for Russian market

### MANUFACTURER

 

Combustion and Energy Srl

Part number:


- 200-HEP-A6Z 7J
- 200-HEP-A6Z 7J + 48VDC CONVERTER
- 200-HEP-A6Z 7J + MDR (power supply from 100 to 240VAC)




## 200-HEP-A6Z 7J

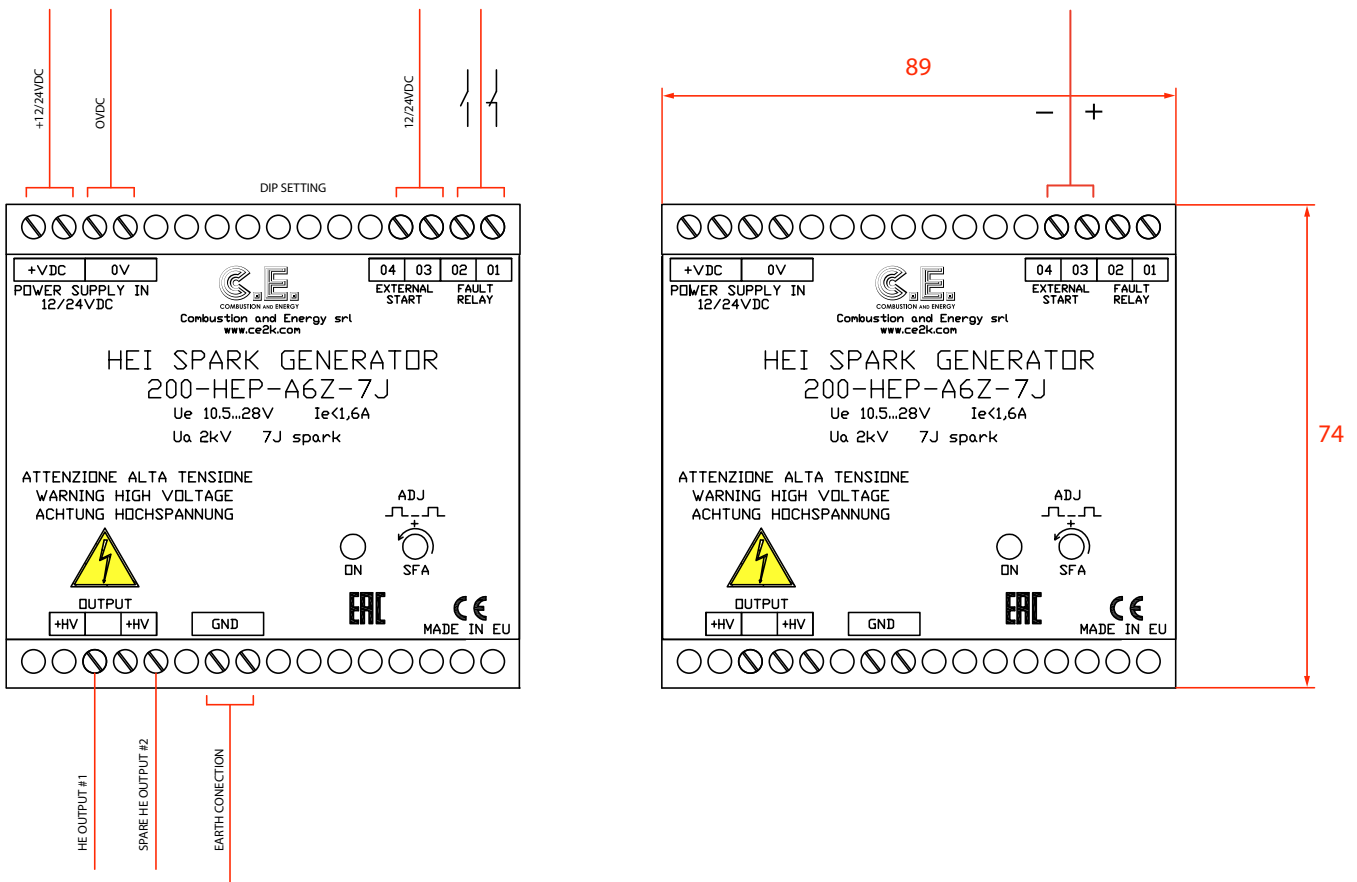


HE MODULE, NO ADDITIONAL FUNCTION

 

 
HE MODULE WILL WORK UNTIL 12 OR 24VDC IS APPLIED ON THE START RELAY  
(Connect 12/24VDC to PIN 3 and 0V to PIN 4)



 
TIP AND CABLE FUNCTION CHECKING AVAILABLE  
OPERATIVE CONDITION CONTACT CLOSED, FAULT CONDITION CONTACT OPEN  
(24V Max applicabile voltage)



 FAULT CONTACT RELAY NORMAL CLOSE (NC)  
(24V max applicabile voltage)



 HE MODULE FUNCTION BOOSTER ACTIVATED (4X7J/s)




HE MODULE FUNCTION BOOSTER WITH EXTERNAL START RELAY

## 200-HEP-A6Z 7J

- Led Red ON: when the HE module is sparking.
- Led Green ON: when the HE module is ON and waiting for spark.
- Led Red flashing continuously: cable interrupted or TIP not connected (reignition delay 30 seconds) - (This function is valid only if DIP 2 is ON)
- Led Red flashing continuously: cable interrupted or TIP in short circuit (reignition delay 10 seconds) - (This function is valid only if DIP 2 is ON)
- Led Orange (green + red) flashing continuously: spark generator component or TIP are no more efficiently. (This function is valid only if DIP 2 is ON)

TOP VIEW

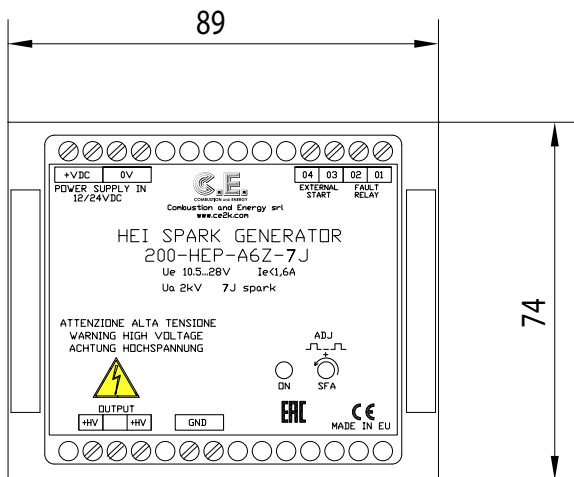

SIDE VIEW

