

# HIGH ENERGY IGNITION MODULE

## 200-HEP-A6Z 24J + CAP



200-HEP-A6Z 24J+CAP



# HIGH ENERGY IGNITION MODULE

## 200-HEP-A6Z 24J + CAP

### KEY FEATURES

- High energy ignition system
- Power discharge: 24J
- Output volt.: 2kV impulsive capacity discharge
- Degree of protection: IP20
- Discharge frequency: <0,1s to >10s adjustable, preset to 5s
- Installation type: for DIN connector
- Max Freq.: 4 sparks x second

### MECHANICAL FEATURES

- Electronic circuits
- Operating temp. range: - 40°C to + 85°C
- Storage temp. range: - 55°C to + 55°C
- Dimensions: 180x75x120mm
- Unit weight: 750g
- Enclosure: PVC
- Connections: screw terminals

### ELECTRICAL FEATURES

- Nominal operating voltage: 2000V
- Power supply: from 20VDC to 28VDC
- Electronics c/w temperature compensation
- Discharge frequencies regulation
- Fault relay (as option) - Max. applicable voltage 60VDC/42VAC 0,2A
- 12-24VDC remote start (as option)

### OPTIONS

- High Energy Ignition Probe 200-HEF-5AA
- Ex d IIC version
- Power supply from 100 to 240VAC with dedicate power converter
- Spark tip code: 200-HEF-9A3

### INSTALLATION

- Inside control local panel

### APPLY TO

- Flares
- Boilers

### CERTIFICATION

- CE marking

### MANUFACTURER

Combustion and Energy Srl


Part number:

- 200-HEP-A6Z 24J+CAP
- 200-HEP-A6Z 24J + CAP + MDR  
(power supply from 100 to 240VAC)




# HIGH ENERGY IGNITION MODULE


## 200-HEP-A6Z 24J + CAP

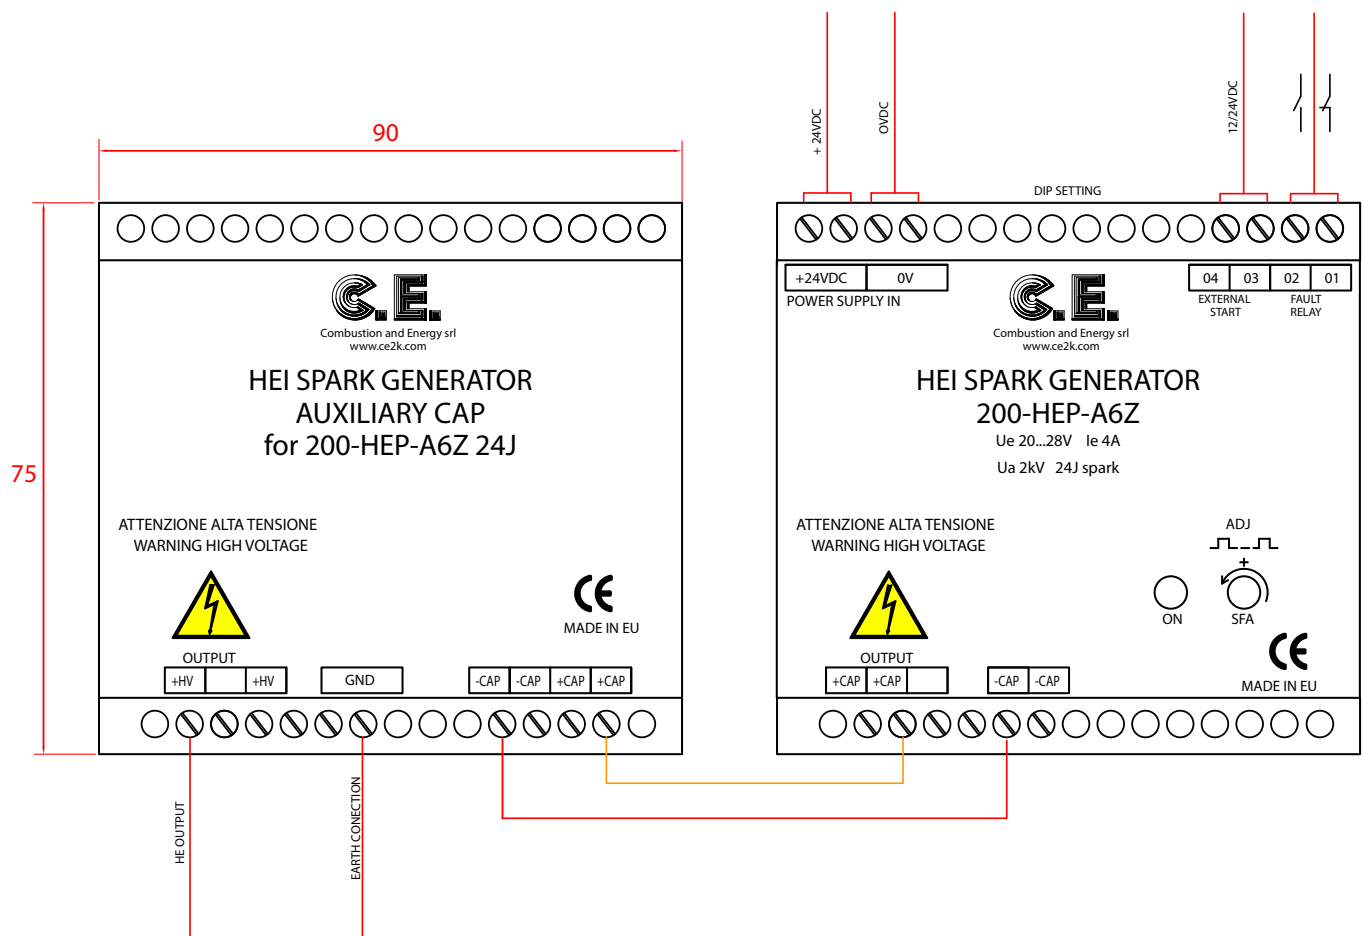

200-HEP-A6Z 24J+CAP

 


ON HE MODULE, NO ADDITIONAL FUNCTION

 


ON HE MODULE WILL WORK UNTIL 12 OR 24VDC IS APPLIED ON THE START RELAY  
(Connect 12/24VDC to PIN 3 and 0V to PIN 4)



 ON TIP AND CABLE FUNCTION CHECKING AVAILABLE  
FAIL SAFE NORMAL CONDITION CONTACT CLOSED, FAULT CONDITION CONTACT OPEN  
(See max. applicable voltage)



 ON FAULT CONTACT RELAY N.C.  
(See max. applicable voltage)




ON HE MODULE FUNCTION BOOSTER WITH EXTERNAL START RELAY




## 200-HEP-A6Z 24J

- Led Red ON: when the HE module is sparking.
- Led Green ON: when the HE module is ON and waiting for spark.
- Led Red flashing continuously: cable interrupted or TIP not connected (reignition delay 30 seconds) - (This function is valid only if DIP 2 is ON)
- Led Red flashing continuously: cable interrupted or TIP in short circuit (reignition delay 10 seconds) - (This function is valid only if DIP 2 is ON)
- Led Orange (green + red) flashing continuously: spark generator component or TIP are no more efficiently. (This function is valid only if DIP 2 is ON)


TOP VIEW

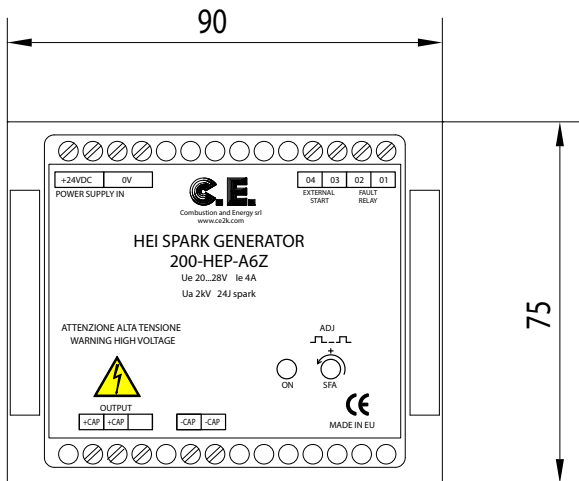


SIDE VIEW

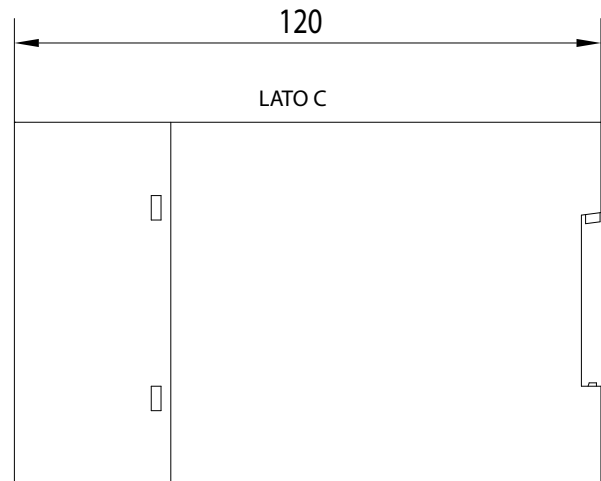

TOP VIEW

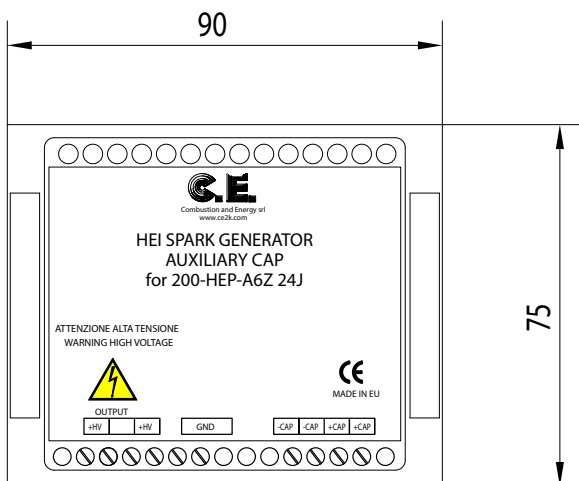

SIDE VIEW

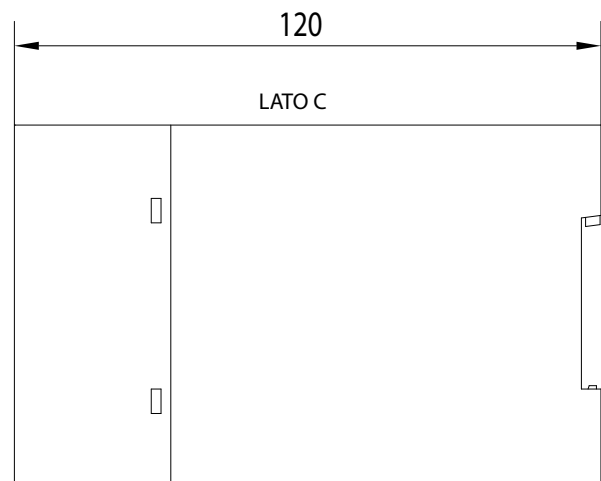

200-HEP-A6Z 24J+CAP